



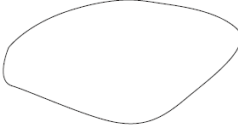



**BARKER AND
STONEHOUSE**

Lerman Dining Chair
Assembly instructions

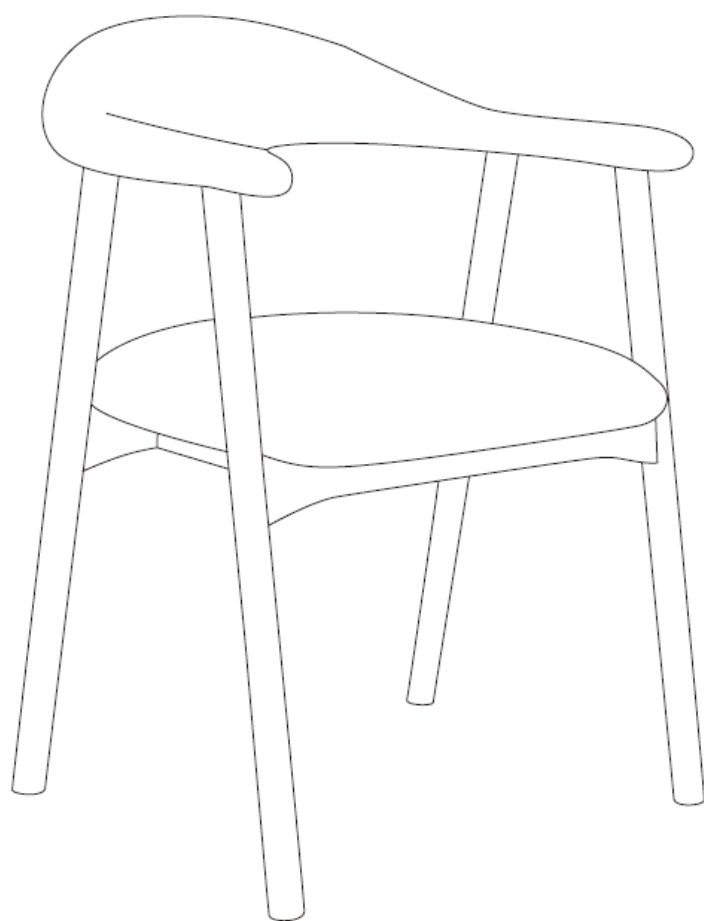



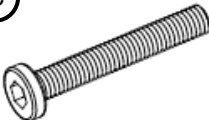





Parts checklist

Please check you have all the parts listed below with your product.

1	2	3	4	5
				
Back/Arms	Seat	Bracket	Legs	Bar
1pc	1pc	2pc	2pc	2pc


Fittings checklist

Please check you have all the fittings listed below with your product.

A	B	C	D
			
M6x35mm Bolt	M6x20mm Bolt	M6x45mm Bolt	M6x16mm Bolt
4pc	4pc	4pc	4pc
E	F	G	H
			
13mm Washer	Floor protector	Allen Key 4mm	Allen Key 5mm
8pc	4pc	1pc	1pc


Step 1

Attach both bars (5) to leg frame (4) using bolts (A) and washers (E). Don't tighten fully until the chair is assembled.

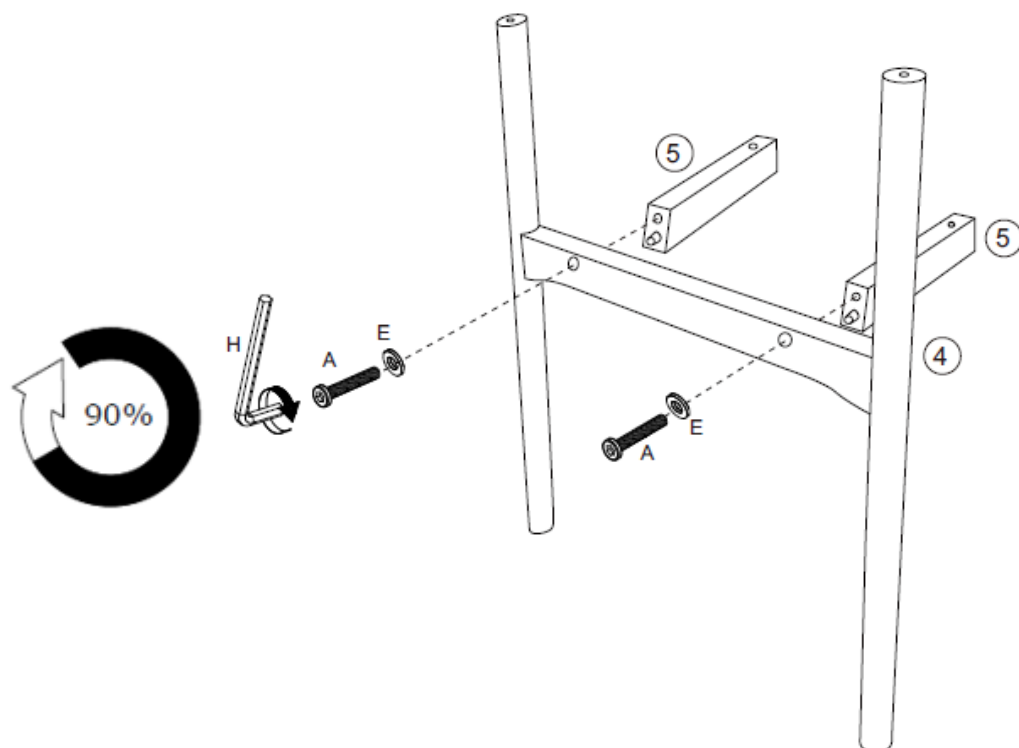


Step 2

Now attach the opposite side of bars (5) to the other leg frame (4) using bolts (A) and washers (E). Don't tighten fully until the chair is assembled.

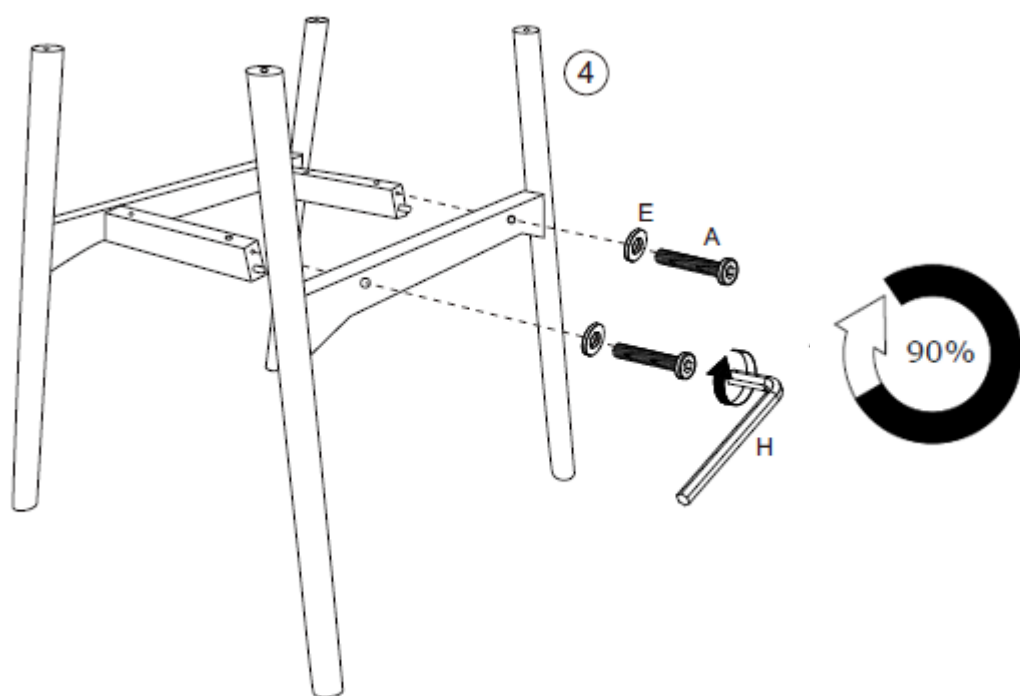


Step 3

Attach brackets (3) to the top of the legs using bolts (B). Make sure both brackets overhang in the same direction as below.

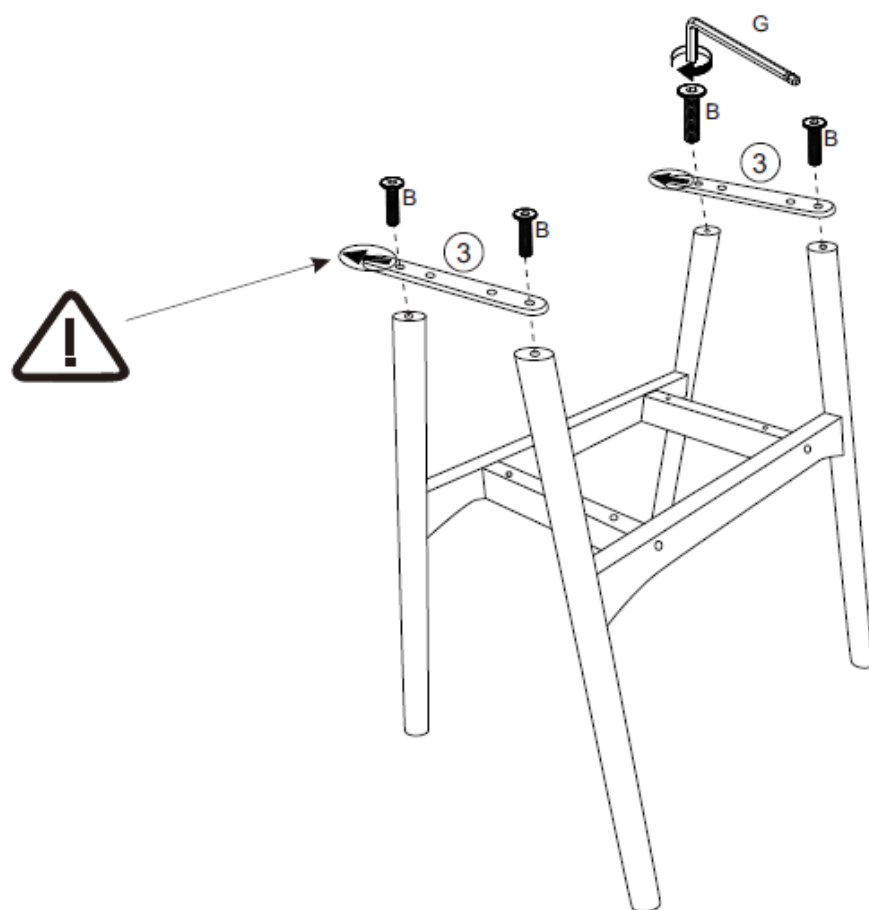

Step 4

Flip the chair over onto the seat (2) making sure the arrow on the bottom of the seat is facing the same direction as the overhang on the brackets. Attach the seat to the frame with bolts (C) and washers (E). Don't tighten fully until the chair is assembled.

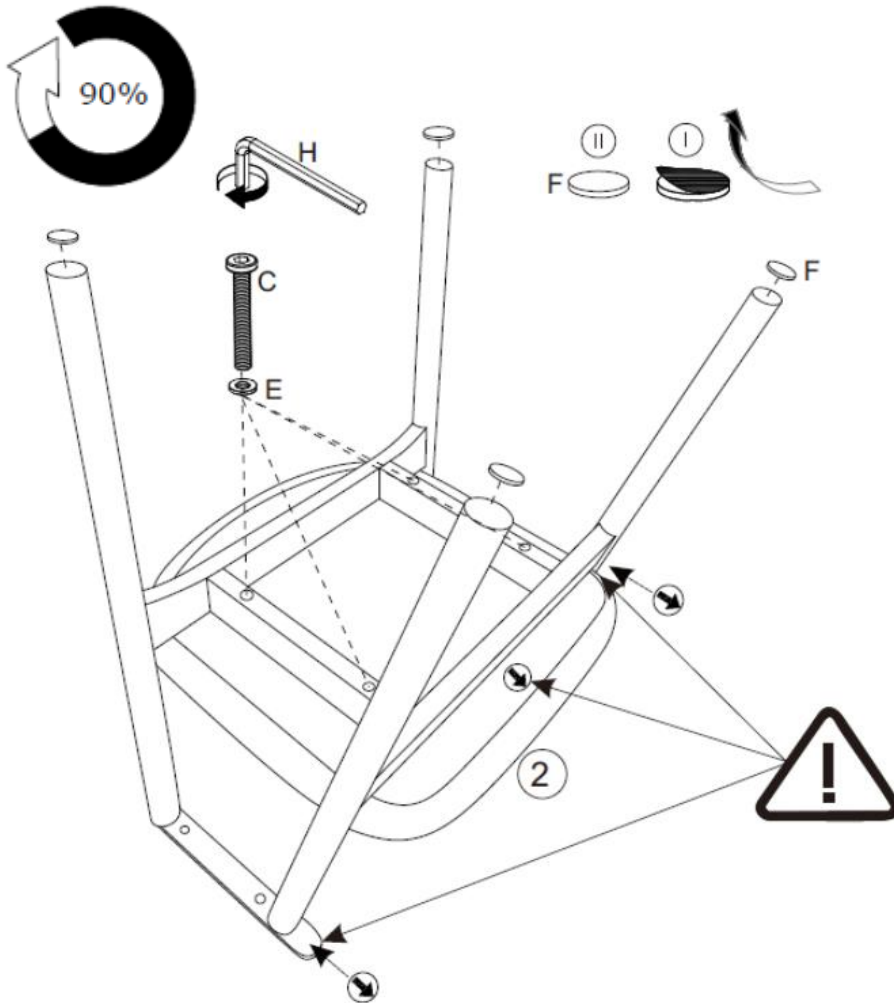


Step 5

Attach stick-on floor protectors (F) to the bottom of each leg.

Step 6

Still in the same upside-down position, sit the brackets (1) on top of the back/arms (1) and attach using bolts (D)

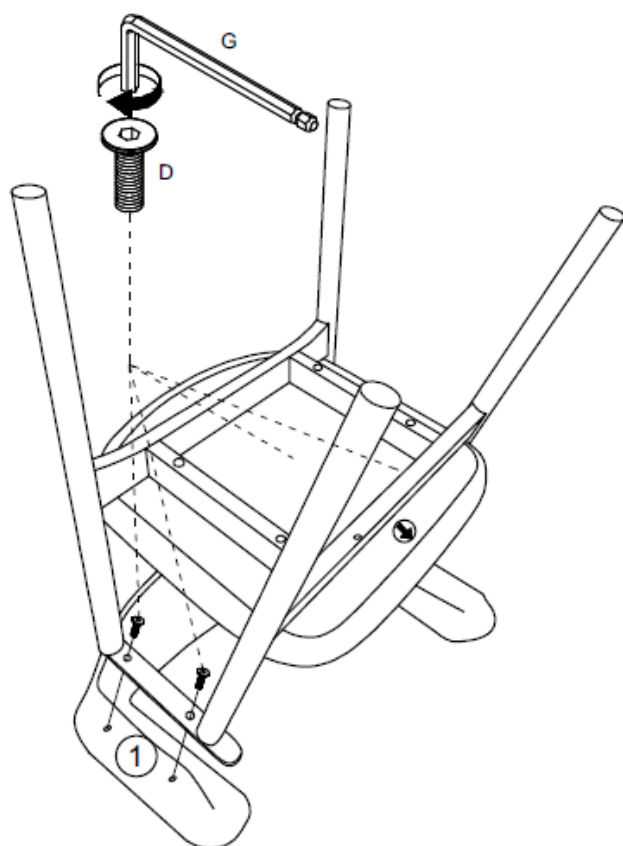

Step 7

Put the assembled chair onto a flat base and then fully tighten all bolts (A) and (C).

