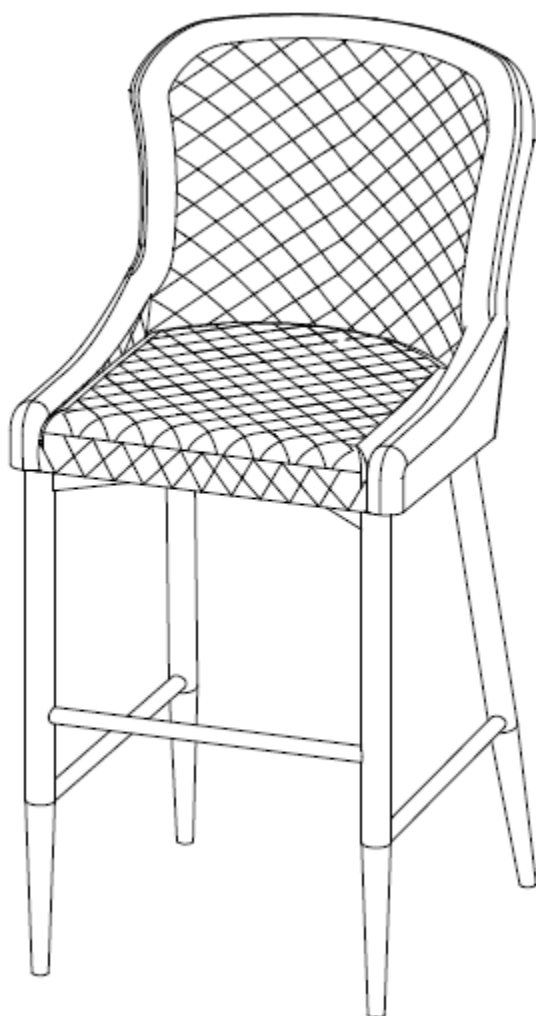


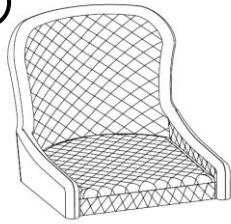
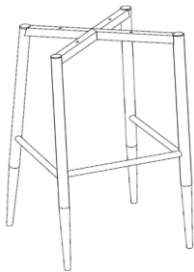
**BARKER AND
STONEHOUSE**

Rivington Counter Stool
Assembly instructions



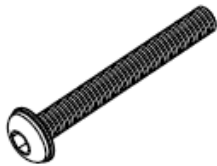


Parts checklist

Please check you have all the parts listed below with your product.

<div>1</div> 	<div>2</div> 
Seat	Base
1pc	1pc

Fittings checklist

Please check you have all the fittings listed below with your product.

<div>A</div> 	<div>B</div> 	<div>C</div> 
M6x55mm Bolt	18mm Washer	Allen Key
4pc	4pc	1pc

Step 1

Turn the seat (1) upside down and position the base (2) as below, making sure the pre-drilled holes align then attach using 4 bolts (A) & 4 washers (B).

